

EXPORTING INSTRUCTIONS

1. It is important to note that **multiple files must be exported** – not just one single file.
2. If a project **contains LID facilities and pond facilities**, then (3) files would be required for **export (Basin Manager, LID Sizer, Pond Sizer)**.
3. If a project **contains LID facilities only**, then (2) files would be required for **export (Basin Manager, LID Sizer)**
4. If a project **contains pond facilities only**, then (2) files would be required for **export (Basin Manager, Pond Sizer)**

IMPORTING INSTRUCTIONS

When **importing** the files:

1. Import the Basin Manager file first.
2. After importing the Basin Manager file, the user should select the “Project” tab and then select the relevant project file.
3. Next, go to the LID sizer and import the LID Sizer file.
4. Next, go to the Pond Sizer and import the Pond Sizer file.